All in one Solenoid Used on E & F models of Bobkarts.

12 volt Cole Hersey 24450




Melting around nut of stud indicates that the load side was shorted or overloaded for a long period of time.



Inside the overloaded solenoid shows how the contact plate lost it's spring from over-heat and the contact on the right is arced inoperative.



Wiring in Bobkart box, E & F models

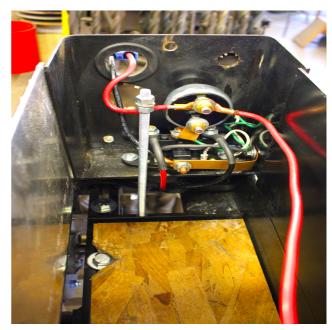



This solenoid was melted internally from 24 volts being sent through it, caused by two 12 volt batteries being wired in series instead of parallel.

